

***NOTE** The **KNOB** will not turn when **CENTS DIAL** shows "00." To release **KNOB**, move the **LEVER** clockwise until "05" shows on the **CENTS DIAL**. After turning the **KNOB** to add or subtract the number of whole dollars desired, move **LEVER** back to "0."

• Guarantee

Your **ADD-A-mite** is guaranteed to give a lifetime of satisfactory service. If it is in need of repair, return it to us with \$5 to cover the cost of handling and mailing. It will be thoroughly rechecked and returned to you promptly.

MONOGRAM OF CALIFORNIA
2500 - 18th Street, San Francisco 10, Calif.

ADD-A-mite
TM

Keep Your Budget

ON THE BEAM!



An Adding Machine in the Palm of Your Hand!

Your new **ADD-A-mite** is as accurate as a fine watch! Add and subtract any amount from 1c to \$25. You'll be amazed how much your new **ADD-A-mite** will help you keep your budget on the beam.

Now, you don't have to do any guesswork in the supermarket! You know, as


you go, exactly what the total will be — before you reach the checkstand.

You'll be showing **ADD-A-mite** to your friends, because it's pretty as your favorite costume jewelry! Made of highly polished aluminum and designed to fit into your hand... conveniently into your purse or pocket.

ADD-A-mite
TM

SEE INSIDE

WHEN USING YOUR **ADD-A-mite** always hold the disk by the outer rim.

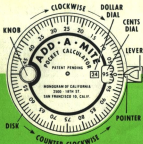

READ THESE EASY-TO-FOLLOW INSTRUCTIONS

Send One to Your Congressman



Works for "billions" or pennies equally well.

A Present for Your Wife



"A subtle suggestion." Lets her spend what you intend.

Be Cheerful at the Checkout Stand



Know as you go what your purchases will total.

A Start from Zero

1. Turn the **KNOB** until "0" shows on the **DOLLAR DIAL**.*
2. Move the **LEVER** until "00" shows on the **CENTS DIAL**.
3. Press the **LEVER** down and move it until the pointer is at "0."

The dials are now "cleared" and show "0" and "00." Be sure to clear dials before starting each problem.

B to Add

1. With **POINTER** at "0," press the **LEVER** down and move **POINTER** to the number to be added.
2. Let the **LEVER** spring up and move it clockwise to "0." Your number now shows on the **CENTS DIAL**. Repeat for each number to be added.
3. To add whole dollars, turn the **KNOB** counter-clockwise.*

C to Subtract

1. With **POINTER** at "0," move the **LEVER** counter-clockwise to the number to be subtracted from total on the dials. **DO NOT PRESS DOWN.** (The difference now shows on the **DIALS**.)
2. **NOW** press the **LEVER** down and return **POINTER** to "0." Repeat for each number to be subtracted.
3. To subtract whole dollars, turn the **KNOB** clockwise.*

***KNOB** will not turn when "00" shows on **CENTS DIAL**. See note on back page.....